


# TCS 15, Steueradapter PM 061 685 -X

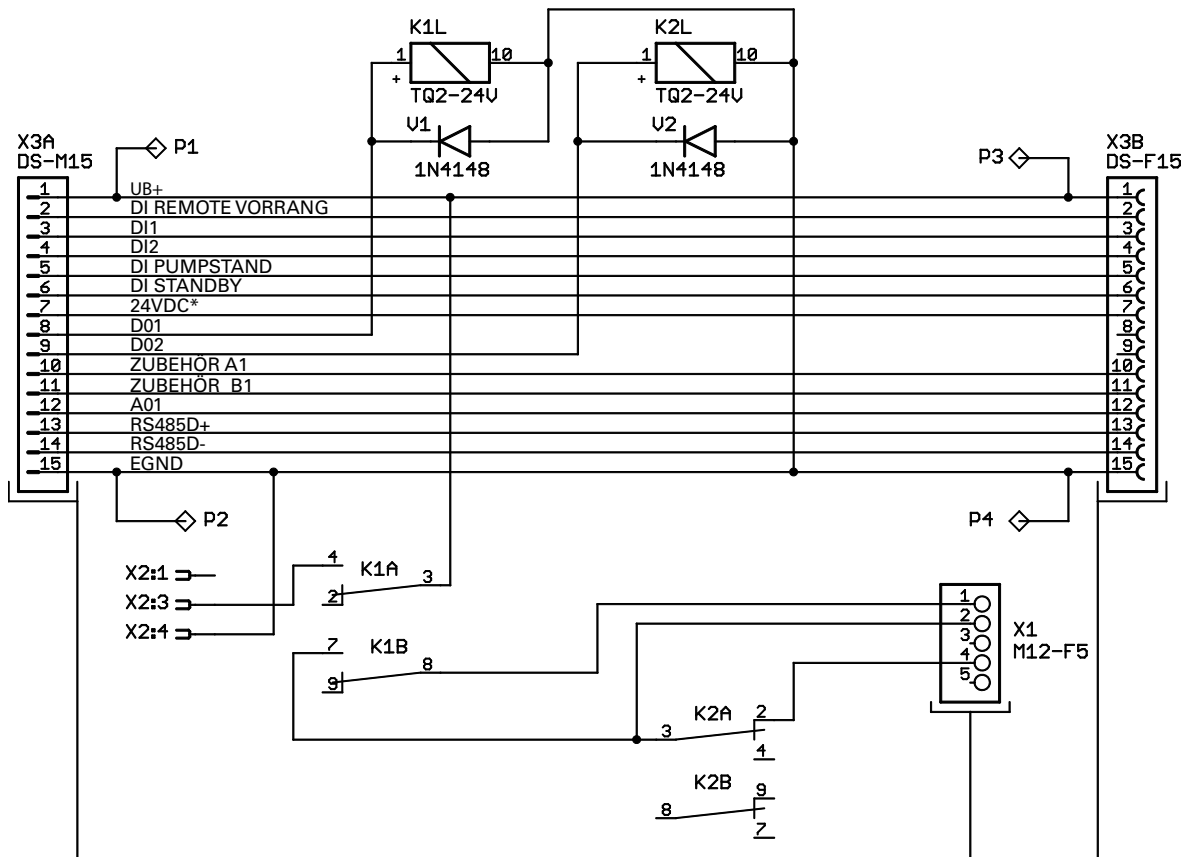

## Gültigkeit

- TCS 15, PM 061 685 -X


## Bestimmungsgemäße Verwendung

- Die Geräte TCS 15 dienen als Adapter für den Anschluss einer Vorpumpe und eines Vorkuumventils (optional) an die Antriebselektronik TC 110.
- Anschluss "Backing pump" M12 Buchse mit Schraubverriegelung, DO2
- Anschluss "Valve" M8 Buchse mit Schraubverriegelung, DO1

## Konfiguration

- Parameter **[P:794]** = 1 (Anzeige erweiterter Parametersatz im DCU)
- Parameter **[P:019]** = 13 (Konfiguration Ausgang DO2 = Vorpumpe)
- Parameter **[P:024]** = 15 (Konfiguration Ausgang DO1 = Pumpstand)

# TCS 15, control adapter PM 061 685 -X

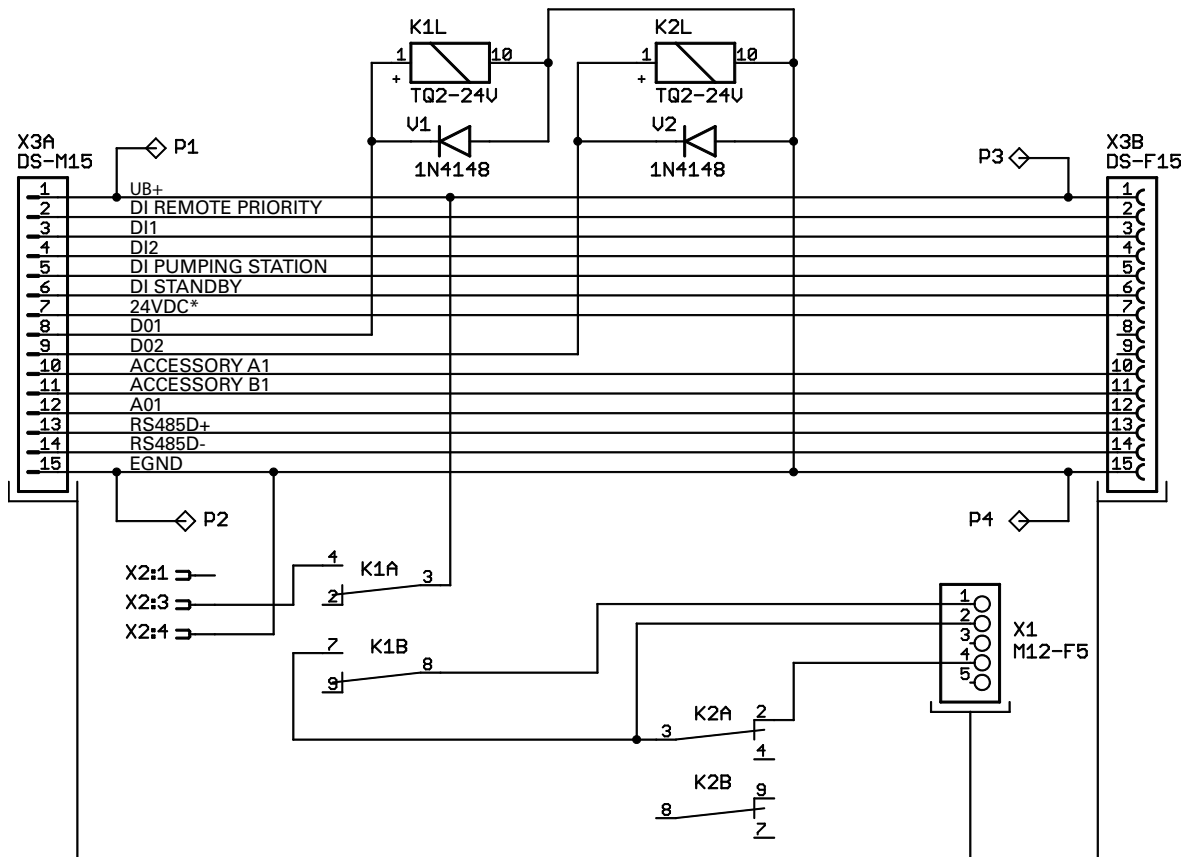

## Validity

- TCS 15, PM 061 685 -X

## Proper use

- The devices TCS 15 serve as an adapter to connect a backing pump and a fore-vacuum valve (optional) to the electronic drive unit TC 110.
- Connection "Backing pump" M12 socket with threaded coupling, DO2
- Connection "Valve" M8 socket with threaded coupling, DO1

## Configuration

- ➔ Parameter [P:794] = 1 (Displaying the extended parameter set at the DCU)
- ➔ Parameter [P:019] = 13 (Configuration output DO2 = Backing pump)
- ➔ Parameter [P:024] = 15 (Configuration output DO1 = Pumping station)